

Quick Guide

CK-10, CT-10, CP-10, CK-20, CT-20, CP-20,
CP-30, CP-50, CK-60, CT-60, CP-60, CP-100 & CP-200





Designed and Manufactured
in the United Kingdom

 

Operating your Security System

This quick guide covers the everyday operation of your alarm system, for full details on system operation and programming, please refer to the 'Master User Guide'.

Full Arming Your Security System

Enter your code or present tag to access the user menu, then scroll down to 'Full Arm System' and press  or . The exit tone will sound and the keypad will instruct you to exit the protected area.

Part Arming your Security System (Part Arm 1)







Enter your code or present your tag to access the user menu, then scroll down to the required Part Arm e.g. 'Part Arm 1'. Once the required part set has been highlighted press  or  to confirm. The exit tone will sound, and the keypad will instruct you to exit the protected area.

NOTE! Part sets will only be displayed if programmed by the installation company.



Disarming your security system

Enter the premises or protected area via the designated entry point. The entry tone will sound, proceed directly to the keypad and present your tag. The entry tone will stop and the system is disarmed.

 









 


Area full arming

Enter your code or present tag to access the user menu, then scroll down to 'Area Full Arm'. Then use the  /  and  /  keys to toggle the selected area on or off. Once you have selected the areas that you would like to arm, press  or  to confirm. The exit tone will sound and the keypad will instruct you to exit the protected area.

 

 

Resetting after an alarm or Fault

Enter your code or present tag to silence any internal and external sounders. The reason for the alarm or fault will then be displayed on the keypad screen. Enter your code or present the tag again, then scroll down to the 'Reset Alarms' option and press  or .

 

 


Omitting Zones









 
 









 
 


 
 




Enter your code or present tag to access the user menu, then scroll down to the 'Omit Zones' option and press  or . Use the  /  and  /  keys to select the required zone then use the  /  and  /  keys to turn omit on or off. When you've finished omitting the zone(s), press the  /  or press and hold the  key for 2 seconds to return to the user menu. If required, the system can be armed or part armed with selected zone(s) omitted by selecting the relevant arming function key.

Changing Your Code













Enter your code or present tag to access the user menu, then use the arrow keys to scroll down to the 'Change my code' option. Press  or  to select, now enter your old passcode, if correct you will be prompted for a 'new code'. Enter your new code then press  or .

Turn chime on/off

Enter your code or present tag to access the user menu, then press and hold the  /  or  key. The area selection menu is displayed, choose the areas you want to chime then press the  or  key.





Function Keys				
Keypad buttons (RK-500's / RK-700's / RK-800's)	Keypad buttons (RK-900's & RK-1000's)	Keypad buttons (RK-400's)	Touch Keypad buttons	Actions
				Arm system
				Part arm system
		-		Area arm system
				Selection button
				Chime tone selection
				Escape button
				Cancel button
-	-	0	-	Toggle options & outputs
-	 	-	-	*Control an operation e.g. Open Garage Door









*If programmed by the installation company

Status Icons	
Icon	Indicates
	Battery is charging/ is charged
	Mains power is connected
	Mains power is disconnected
	External strobe is flashing
	External bell is sounding
	Chime is enabled
	WiFi module connected
	GSM module connected
	Ethernet module connected
	Phone line connected
	User programmed timer running
	User programmed alarm running
Keypad Status LED	
Colour	System Status
Blue	Normal operation, all zones are healthy
Green	User menu selected and system is ready for arming
Yellow	One or more zones are active, system may not arm
Red	Alarm active

Additional Features

Additional features can be enabled by the installation company and as such some options may not be available on your security system.

To access the additional features whilst the system is in an unset state, press  /  and  /  from the home screen and scroll through all enabled additional features:

Feature	Keypad Text	Operation	Touch screen Icon
Control Outputs	User Control	Allows custom programmed outputs to be operated without the requirement of a user code i.e. opening garage doors.	
X10	X10 Control	Allows users to operate X10 outputs without the requirement of a user code. X10 is a home automation solution, this is a 3rd party peripheral that may be connected to the security system.	
Alarm Clock	Alarm Clock	Allows users to program an alarm clock using the control panels keypad. A useful application is for a keypad that is situated in the bedroom, an alarm can sound in the morning to wake the user up.	
Turn Chime on or off	Chime	Allows users to turn chime on or off for selected areas without the requirement of a user code. Chime is commonly used to create a tone when a front door is opened.	
Review voice Messages	Messages	Allows users to listen to voice messages they may have been left through the control panel – the user can play and delete these messages.	
Send a text message	Send SMS	Allows users to send text messages from the control panels PSTN/ GSM module – the user can add a mobile phone number and a 255-character message and send this message.	
Display LCD Message	LCD Message	Allows users to display a text message on the LCD of all keypads.	
Countdown timer	Timer	Allows users to start a countdown timer without the requirement of entering a user code. A common application would be when cooking or for an office complex when the building needs to be closed.	

For Support Telephone: _____